

TAMAGOTCHI™ INSTRUCTIONS

 
Congratulations!
You are now the caretaker
for a genuine Tamagotchi.
Tamagotchi is a cyber
creature who has traveled
millions of miles from its
home planet to learn what
life is like on earth. Let me
explain how to care for
your Tamagotchi.

Now that you have your
Tamagotchi, you must do these
three things:




1) Wake up
Tamagotchi from
its million light-
year sleep by
removing the
insulating sheet (pull
paper tab from side of body).

2) Set the Tamagotchi
communication
screen (Reset
operation). Press
the reset switch
on the rear of the
egg with a pointed

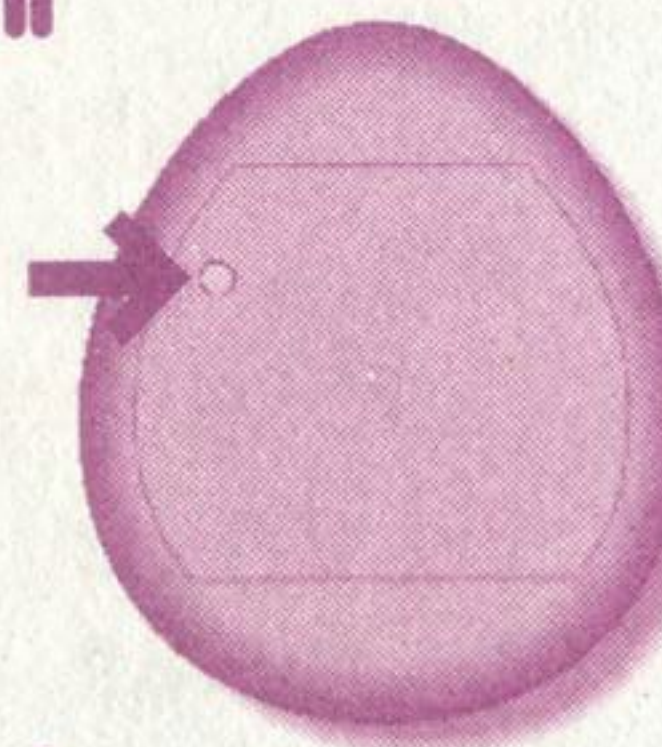

 object. NOTE: Remember
not to press the reset switch
too hard when using a sharp
rod, pencils, sharp pens, etc.

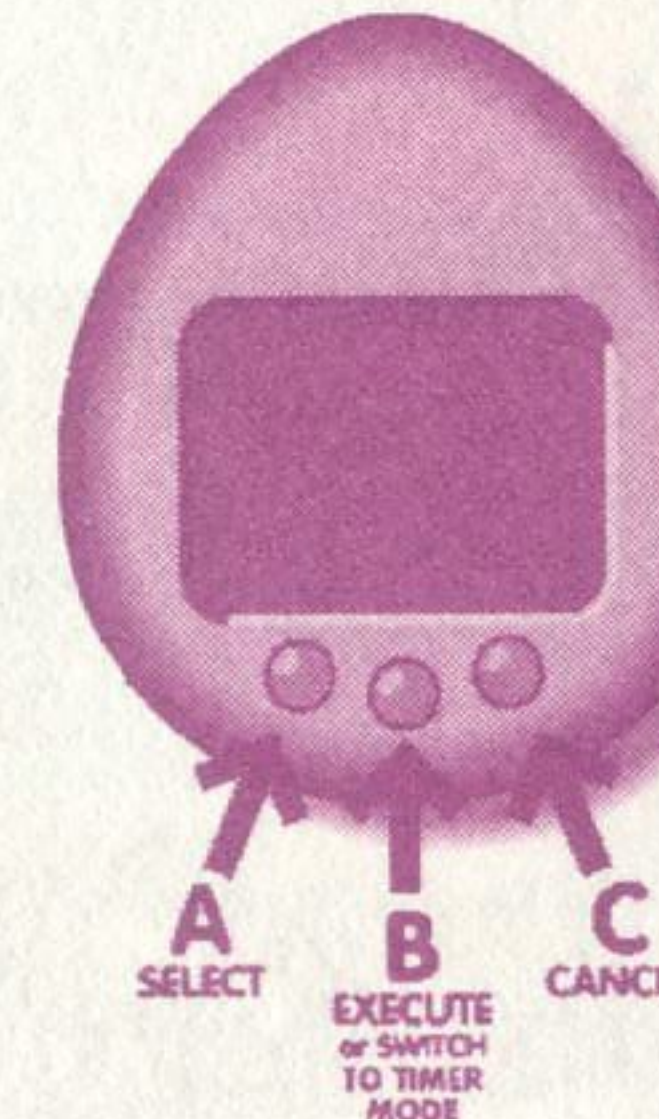

3) Adjust the time
difference between
Tamagotchi's planet
and earth (Timer
set). First press the
middle button (B) to
bring up the timer
screen. Use the left
button (A) to set the
hours and the B button to set
the minutes. Once you have
set the correct time, press the
right button (C) to set the

timer. Next, return to the
main screen by pressing the
B button again.

When you have completed
these three steps, a pulsating
egg will appear. Tamagotchi
will hatch in about 5 minutes.

NOTE: During this time only the
timer and reset functions are
available.

As soon as Tamagotchi hatches,
it will beep at you for attention.
This is where the health meter
comes in handy. You can
determine the mood, health and
behavior of Tamagotchi with the

FEED: Press A button until knife and fork
icon is highlighted, then press B. Select
either Meal or Snack by pressing the A
button to move the arrow, then press
B button to feed Tamagotchi. Be careful
not to overfeed Tamagotchi; if you do it will refuse to eat.

LIGHT: Press A button until the
light bulb icon is highlighted, then
press B button. Select either On or
Off by pressing the A button to move
the arrow, then press the B button. The light
should be turned off when Tamagotchi is
sleeping, or it might get restless! Tamagotchi
automatically turn the light on when it wakes up.

DUCK: Just like real pets,
Tamagotchi goes to the
bathroom. If droppings
appear on the screen, it must be
cleaned up right away or
Tamagotchi will get sick. Press the A button
until the Duck icon is highlighted, then
press the B button to flush the screen. Tamagotchi
will be very happy after the mess is cleaned up.

HEALTH METER: Check Tamagotchi's
health by pressing the A button until the Health
meter icon is highlighted, then press B button to
check age/weight, discipline, hunger and health.
After you have checked all the screens to see if
everything is okay, press C to return to the main
screen. Also check this screen if Tamagotchi's
"attention" icon is highlighted.

Discipline meter

More black hearts mean more discipline

NOTE: Remember to use the reset switch when using a sharp knife, sharp pens, etc. Adjust the time difference between Tamagotchi's planet and earth (Timer screen). First press the middle button (B) to bring up the timer screen. Use the left button (A) to set the time. Press the B button to set the time. Once you have set the correct time, press the right button (C) to set the

timer. Next, return to the main screen by pressing the B button again.

When you have completed these three steps, a pulsating egg will appear. Tamagotchi will hatch in about 5 minutes.

NOTE: During this time only the timer and reset functions are available.

 
As soon as Tamagotchi hatches, it will beep at you for attention. This is where the health meter comes in handy. You can determine the mood, health and behavior of Tamagotchi with the

FEED: Press A button until knife and fork icon is highlighted, then press B. Select either Meal or Snack by pressing the A button to move the arrow, then press the B button to feed Tamagotchi. Be careful not to overfeed Tamagotchi; if you do it will refuse to eat.


LIGHT: Press A button until the light bulb icon is highlighted, then press B button. Select either On or Off by pressing the A button to move the arrow, then press the B button. The light should be turned off when Tamagotchi is sleeping, or it might get restless! Tamagotchi will automatically turn the light on when it wakes up.

DUCK: Just like real pets, Tamagotchi goes to the bathroom. If droppings appear on the screen, it must be cleaned up right away or Tamagotchi will get sick. Press the A button until the Duck icon is highlighted, then press the B button to flush the screen. Tamagotchi will be very happy after the mess is cleaned up.

HEALTH METER: Check Tamagotchi's health, by pressing the A button until the Health Meter icon is highlighted, then press B button to check Tamagotchi's age/weight, discipline, hunger and happiness. After you have checked all the screens to see if Tamagotchi needs anything, press C to return to the main screen. You should also check this screen if Tamagotchi beeps at you and the "attention" icon is highlighted.



Discipline meter

 

More black hearts means full or happy!

PLAY: Press A button until the bat and ball icon is highlighted, then press B button to begin the game. The object is to guess which way Tamagotchi will turn. To choose left, press the A button, to choose right, press the B button. If you choose the correct direction, Tamagotchi will be happy. There are 5 chances in each game to match Tamagotchi; the more you match, the happier Tamagotchi will be. To stop the game press the C button. After playing, check the happiness meter to see if it went up or down.

MEDICINE: If a "skull" image appears, Tamagotchi is sick and needs medicine. Press A button until the medicine icon is highlighted, then press B. Sometimes 2 or 3 injections are needed before Tamagotchi is well.

ATTENTION: When this icon is highlighted, Tamagotchi needs something. Check the Health Meter, to determine what Tamagotchi needs. If Tamagotchi doesn't need anything, it must be disciplined or the Attention icon will stay highlighted.

DISCIPLINE: Tamagotchi needs discipline if it:
1) beeps even though it is full and happy
2) won't eat when it is hungry
3) won't play games when it is not very happy. If you neglect to discipline Tamagotchi when needed, it might grow up into an unattractive, bad mannered alien.

health meter. Tamagotchi will need to be fed and played with soon after it hatches. In order to start Tamagotchi on a good growth path, you must take good care of Tamagotchi right from the start.

HAPPINESS AND HUNGER STATUS CHECK



There are a total of 4 hearts on the "Happy" and "Hunger" screens and they start out empty. The more hearts that are filled, the better satisfied



Tamagotchi is. You must feed or play with Tamagotchi in order to fill the empty hearts. If you keep Tamagotchi full and

happy, it will grow into a cute, happy cyber creature. If you neglect Tamagotchi, it will grow into an unattractive alien.

DISCIPLINE STATUS CHECK

As the meter moves towards the right, it indicates you are raising a well-behaved Tamagotchi. The higher the discipline scale



the less trouble and better behaved Tamagotchi will be. The key to increasing the discipline meter is

to make sure you scold Tamagotchi when necessary. If Tamagotchi beeps at you for no reason, you must discipline it.

Tamagotchi needs discipline if it:

 
- * beeps at you even though it is full and happy
- * won't eat when it is hungry
- * won't play games when it is not very happy

AGE AND WEIGHT CHECK

Converts and displays Tamagotchi's growth information in earth units.



GROWTH CHART

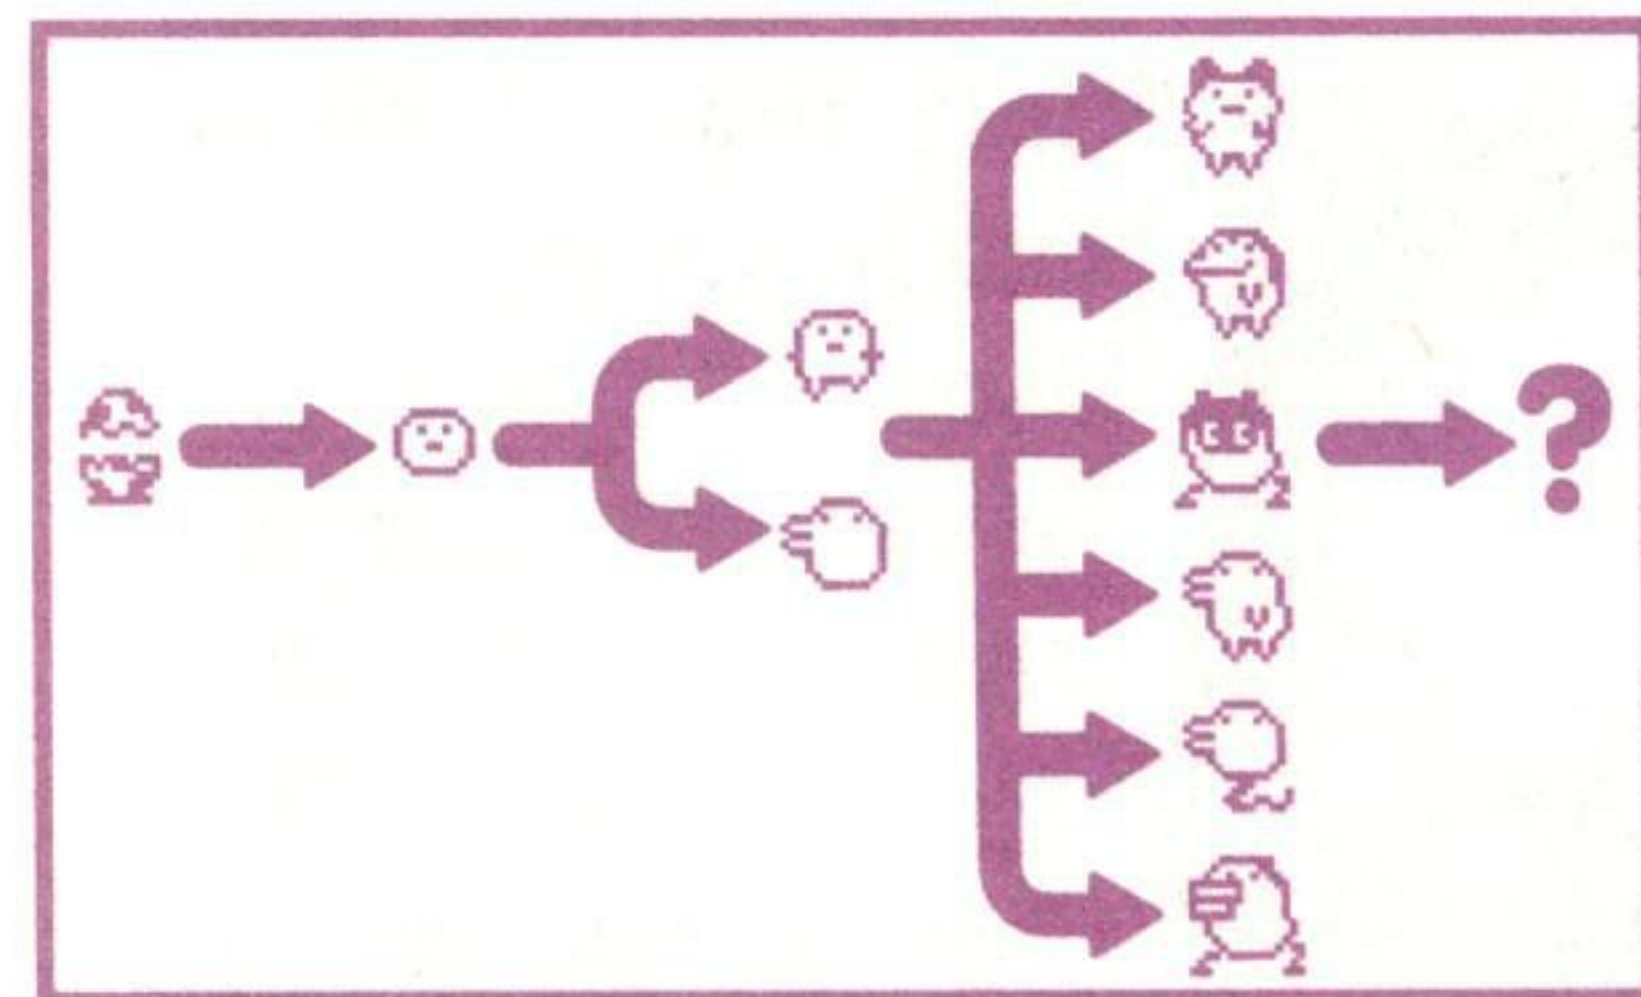

Which one will you get...maybe the hidden character?

 
BIOLOGY

- * One earth day is equal to about one year for Tamagotchi.
- * Tamagotchi will change appearance several times before it reaches its adult form.
- * It seems that the shape, personality and life of each Tamagotchi is based on how well you take care of it. Each time you hatch a new Tamagotchi it could grow up to be any one of several adult forms.

Tamagotchi will always return to its home planet. How well you care for it helps determine how long Tamagotchi will stay on Earth. When it is time for

Tamagotchi to return to its

home planet, there is nothing you can do. But, don't worry, you can always hatch another egg.

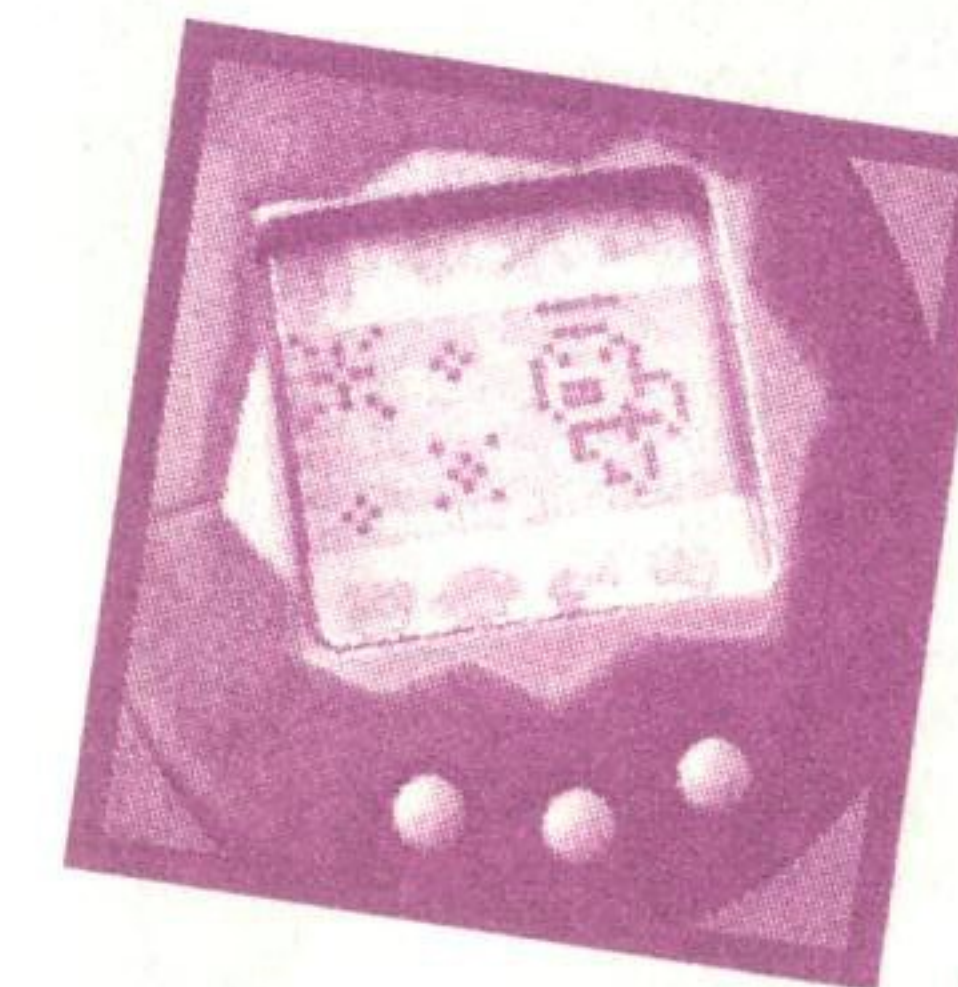

WILL YOU BE A GOOD CARETAKER FOR TAMAGOTCHI?

0 - 5 YEARS: Try harder next time

6 - 10 YEARS:
Room for improvement

11 - 16 YEARS: Good job

17 - 22 YEARS:
Excellent

23 + YEARS:
Amazing!

In order to hatch another Tamagotchi, press the A and C buttons simultaneously and a new pulsating egg will



appear. In about 5 new Tamagotchi will Maybe you will raise version of Tamagotchi Try it and see.

TIMER FUNCTION

When you want to know the time, press the B button when icons are highlighted and the time will appear on the screen. To return to the main menu screen, press B button again.

In order to re-set the time, press the B button to bring

will always return to
net. How well you
ps determine how
tchi will stay on
it is time for
tchi to return to its
home planet,
there is
nothing you
can do. But,
don't worry,
you can always
hatch another
egg.

WILL YOU BE A GOOD CARETAKER FOR TAMAGOTCHI?

0 - 5 YEARS: Try harder next time

6 - 10 YEARS:
Room for improvement

11 - 16 YEARS: Good
job

17 - 22 YEARS:
Excellent

23 + YEARS:
Amazing!

In order to hatch
another Tamagotchi, press the A
and C buttons simultaneously
and a new pulsating egg will



appear. In about 5 minutes a
new Tamagotchi will be born.
Maybe you will raise a different
version of Tamagotchi this time.
Try it and see.

TIMER FUNCTION

When you want to
know the time, press
the B button when no
icons are highlighted
and the time will
appear on the screen.
To return to the main
menu screen, press the
B button again.

In order to re-set the time, press
the B button to bring up the



timer. Press the A and C buttons
simultaneously and the word
"SET" will appear on the screen.
Then follow the same
instructions used to set the
timer. Press C button again to
return to regular time. Press B
again to return to the main
screen.

NOTE: Timer cannot be adjusted
if Tamagotchi is preparing to
return to its home planet.

WHEN TO RESET

- * When you want to let
Tamagotchi return home
- * When you have changed
batteries

- * If Tamagotchi is not functioning
properly
 - * When you want to begin
raising a new Tamagotchi
- NOTE: Remember, do not press
the reset button too hard when
using a pointed object.

SOUND

After Tamagotchi has hatched,
the sound can be turned off by
pressing the A and C buttons
simultaneously. To restore the
sound, press A and C again.

BATTERIES

Replace the batteries if the
Liquid Crystal Display (LCD) is
weak.

- 1) Loosen the screws on the
back side. Remove the cover
together with the screws.
- 2) Take out the old batteries.
Insert 2 new LR44 batteries,
making sure to match "+"
and "-" signs properly. Be
sure to use both new
batteries, do not mix old and
new batteries. Do not mix
ALKALINE, STANDARD or
RECHARGEABLE BATTERIES.
Dispose of used batteries
properly.
- 3) Replace the cover and
tighten the screws.
- 4) Reset the timer and a new
Tamagotchi will hatch in 5
minutes.

CAUTION: Battery may be harmful if swallowed.
© Bandai 1996-1997. Printed in China.