


**TWIN  
GAME**

# SAGBALL

## A. Single-Player-Game (playing against a computer)

1. Depress MODE button until the display shows "L" or "H".  
"L" – Low Speed Game (For beginners)  
"H" – High Speed Game (For advanced playing)
2. Depress HIT (start) button. Game starts.  
The cable has "Female" and "Male" connectors as shown below:

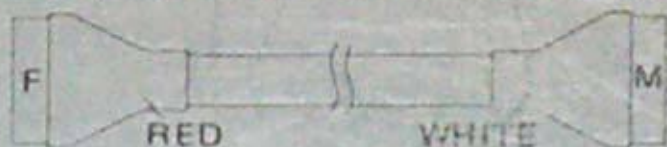

## B. TWIN Game (2-Players-Game)

1. See that both SAGBALL machines are in the time display mode.
2. Connect two SAGBALL machines using an attached cable.
3. Depress MODE button on the FEMALE machine until the FEMALE machine display shows "L" or "H".
4. See that the MALE machine shows "L" and depress HIT (start) button on the FEMALE machine. A game starts on both machines.
  - \* If HIT (start) button on the FEMALE machine is depressed before the MALE machine shows "L", a game doesn't start. If that is so, please remove the cable, depress ACL button and then start from the procedure for setting time.
  - \* If something is wrong, remove the cable and depress ACL button of both machines. Set time and depress MODE button to return the machine to the time display mode. Then connect the machines again.

## C. CAUTION

Don't keep your machine showing "L" or "H". Batteries drain rapidly. When you don't play SAGBALL after the selection of games, please keep your machine in the time display mode.

Further, the speed of a ball becomes irregular during the process of a game unless HIT (start) button is depressed within 30 seconds to start the game selected. If that is so, please depress MODE button until the display shows "L" or "H" again.